

XF5C4M1X

Free Standing Dishwasher



DotMatrix display **Eco Inverter Motor** Advanced programs Flex zone Programs with artificial intelligence 15 Placings Advanced remote control and content 8 Programs **Delay Start** Half load End of cycle indicator **Automatic Door Opening** Safety-stop in lower basket Adjustable top basket Smart sensor system **Folding Grilles**

A class

Effortlessly manage your wash settings with the intuitive display. It shows you everything you need to know about your wash settings, including the water consumption, temperature, and programme duration, as well as the amount of energy you're using via the Eco index. So you can easily choose the most efficient wash cycle depending on your needs.

Give your dishes the tailored care they deserve with the Flex Zone wash program. Simply load your delicate items in the top basket for a gentle wash and your heavily stained pots, pans, and plates in the bottom basket for a more intensive clean. Flexible cleaning at the same time, in the same cycle.

You'll never have to wait for a full load of dishes again, thanks to the Half Load Pro wash system. Simply choose a basket to load your dishes into and select either the top or bottom spray arm to complete your wash. Not only will it help you get your dishes cleaned sooner, but you'll never use more water and energy than you need.

If you need lots of space for all the household dishes, look no further than the Maxi Tub. It gives you 10% more internal volume in a standard-size tub, making this the most spacious dishwasher on the market. So, more items loaded into the tub equals less energy, water and time consumption for optimised results.

Forgo hand-drying at the end of the cycle with the Automatic Open-Door system. When you select this option, the dishwasher door automatically opens by 100mm letting air circulate your dishes to help them dry naturally, while also saving energy.

Dimensions (Height X Width X Depth) cm: 85cm X 60cm X 60cm



